



Drawing **035-A**

Description **Fixed hexagonal Valve**

**ASSEMBLY INSTRUCTION:**

Insert the item into the radiator connector and rotate it until the O-ring is adherent to the outside surface of the connector.

Make sure that the O-ring adheres to the flat surface of the connector and is not ejected from the seat.

Even if the valve can withstand a tightening torque of 10 Nm, do not exceed the maximum recommended tightening torque of 8 Nm to prevent the O-ring from being ejected from the seat, cut or permanently deformed.

The connected part must comply with DIN 76-2

**COMPONENTS:**

BODY AND SCREW:BRASS UNI EN 12164 CW614N

NICKEL-PLATING 3-5 MICRON

ORING EPDM 70 SH BLACK

**TECHNICAL NOTES:**

BODY:TIGHTENING TORQUE MAX= 10 NM

SCREW:TIGHTENING TORQUE FROM 0,8 TO 2 NM

UTILIZATION TEMPERATURE=80°C PEAK=130°C

UTILIZATION PRESSURE=10BAR PEAK=13BAR